

Model	Force (N)	Power supply	Description
MVE506	600	24 Vac/Vdc	long yoke, modulating/floating control
MVE510	1000	24 Vac/Vdc	long yoke, modulating/floating control
MVE515	1500	24 Vac/Vdc	long yoke, modulating/floating control
MVE506S	600	24 Vac/Vdc	short yoke, modulating/floating control
MVE510S	1000	24 Vac/Vdc	short yoke, modulating/floating control
MVE515S	1500	24 Vac/Vdc	short yoke, modulating/floating control



APPLICATION AND USE

The New MVE is a flexible electro-mechanical actuator for the control of two and three way globe valves in:

- Heating and Cooling systems
- Air handling units
- District Heating plants
- Industrial Temperature Control systems.

The MVE can be controlled either by a proportional (modulating) signal or by an increase/decrease (Floating) signal.

It is easy to mount and connect the actuator. Direct mounting is possible to any CONTROLLI flanged valve. Linkage kits are available for CONTROLLI threaded valves as well as for valves of other manufacturers.

The Actuator has a fine resolution (500 steps on the full stroke range) for exacting fluid control and it is able to self-calibrate on a different stroke without the need of any user action (this function is dip-switch selectable on the field).

The MVE has intelligent behavior and alarm functionality in case of unexpected operation, feedback of alarms to the user is provided by LEDs (Green and Red) on the control board.

OPERATION

The Actuator translates the control signal (modulating or 3 point floating) from the controller into a valve position. A modern brushless DC motor in the actuator drive a gear train and a worm gear – screw jack mechanism convert the motor revolutions into accurate and repeatable linear movements.

Control Signal

The MVE can be controlled by one of 2 main control types.

- 3 point floating ;
- modulating (or proportional) signal with filed selectable range (e.g. 0..10Vdc, 2..10Vdc, 0..5/5..10Vdc and 4-20mA).

Manual Operation

There is a manual operation handle on the Actuator. When it is lowered, the power supply to the motor power stage circuitry is cut and the motor stops. The actuator can be operated manually and the valve positioned accordingly. The manual operation level latches in position until it is raised again and power returns to the board and motor. When the manual override is engaged the green and the red LED are ON.

Manual operation lever can also be used as sort of re-set function after any dipswitch setting or alarm function occurrence. The actuator is supplied with the manual operator lowered.

Position Feedback


The MVE utilizes a 2-10V position feedback, where 2V indicates a closed valve with a fully retracted actuator.

Calibration

The MVE has both Auto and Manual Stroke Calibration, Sw.7. In factory delivery the auto stroke calibration is enabled – manual calibration is not necessary unless maintenance is required on the valve or certain alarm functions are desired.

End Point Auxiliary Switches (with accessory DMVE)

End point switches change over when the valve is fully open or closed. End point switches can be utilized to indicate valve stroke end positions and for relay control of additional plant equipment. End point switches will also allow the actuators to be controlled in sequence, thus providing a high system turn down ratio of the plant. The auxiliary switch position according to the valve position is shown in the picture below.

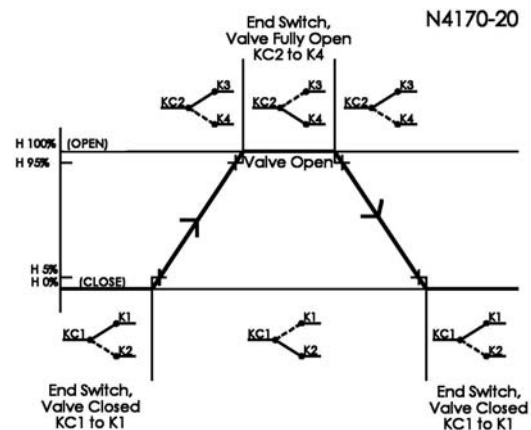

Diagnostic

The actuator is provided with a self diagnostic algorithm able to detect faulty conditions:

- stroke out of range 5-60 mm;
- unexpected stall condition (e.g. valve stuck);
- missing expected stall condition (e.g. link loose);
- voltage supply out of range.


These faulty conditions are signaled via the Green and Red LED on the PCBA blinking accordingly (see Diagnostic – Alarm Function Table).

TECHNICAL FEATURES


	MVE506/S	MVE510/S	MVE515/S
Supply voltage L1 Ln	AC: 24 Vac $\pm 20\%$ 50-60Hz DC: 22-30 Vdc (Reference Ln)		
Power consumption (running)	13 VA / 6 W	18 VA / 8 W	21 VA / 11 W
Power consumption (Holding)	11 VA / 5 W	11 VA / 5 W	13 VA / 7 W
Running time			
Modulating 5-15 mm	15 (s)		
Modulating 15-25mm	20 (s)		
Modulating 25-60 mm	30 (s)		
Increase/decrease (s)	60		
Transformer Size (VA)	20	30	
Stroke (mm)	5-60 mm		
Force (N)	600	1000	
Duty cycle	max 50%/60 minutes		
Analog input Y M	Voltage 0-10 V - impedance > 100 K Ω (range: 0-10/2/10 0-5/2-6 5-10/6-10) 500 Ω (range 4-20mA)		
Digital inputs Y1-Y2	Connection to L1 or Ln when powered in AC Connection to Ln only when powered in DC		
Output G1	Voltage 16 Vdc $\pm 0,5$ V Max Load 25 mA,		
Output Y	Voltage 2-10 Vdc (0-100%) Max Load 2 mA		
Ambient temperature	Operation and storage -10 / +50 °C		
Ambient Humidity	max 90% RH		
Protection degree	IP54		
Standard	Emission/Immunity EMC 2004/108/CE according to EN 61326-1:2006 standard		
Material	Housing: Aluminum - Cover: ABS plastic		
Color	Aluminum / White		
Weight (Kg)	1.5 kg		
Dimensions (mm)	Refer to the picture on the page 6		

ASSEMBLING

The actuator can be mounted with any orientation but never up-side down. When the fluid temperature exceed 120°C the actuator shall be mounted leaning 45°.

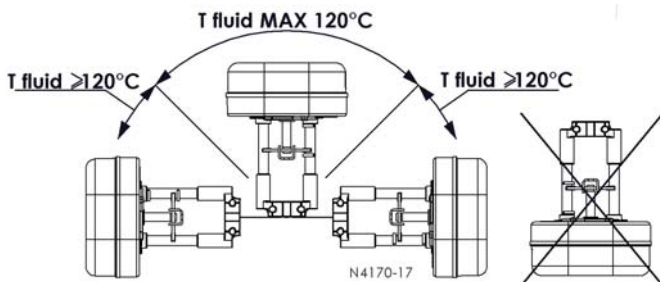

To mount the actuator on to a valve, position the valve stem to the bottom of its travel, slide the actuator onto the valve neck, adjusting with the manual override the screw jack position so the square nut on the valve spindle fits into the groove on the cross bar. Then slide the brace into the groove on the valve neck and secure the nuts.

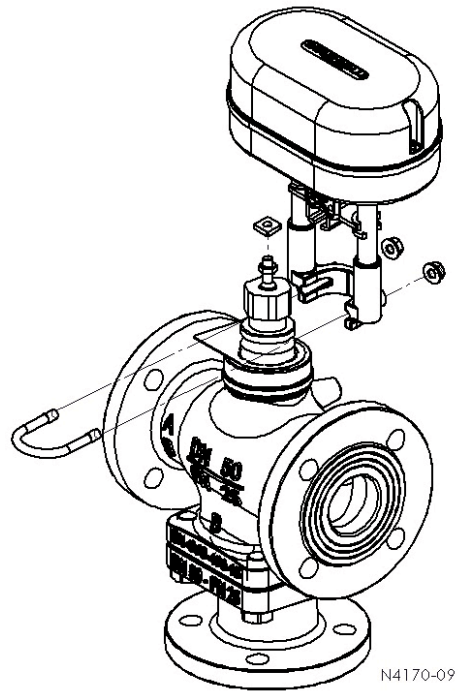

See mounting instructions for full details (MVE_DIM196).

MAINTENANCE

The actuator is free of maintenance.

ACCESSORIES

DMVE Endpoint Auxiliary Switches
248 Yoke Heater (Suggested when the fluid temperature is below 0°C)

Linkage	MVE	MVES
Current Controlli valves (except for 2TGB.F/3TGB.F PN16)	(not required)	/
2TGB.F/3TGB.F PN16	/	(not required)
Controlli valves with threaded M40 connections (except for VMB/VSB/VSBF/VMBF PN16)	AG51	/
VMB/VSB/ VSBF/VMBF PN16	AG52	AG63
<u>Other manufacturers</u>		
Landis *	AG 60-03	/
Danfoss (VR/VF (S) models)	AG60-07	/
TAC DN15-V298	AG 60-08	/
TAC DN15-V2XX/V3XX	AG 60-09	/
Honeywell**	AG 60-10	/
Airtek	AG 60-11/AG60-12	/
Johnson Controls code VB7816-2111	AG 66	/
Johnson Controls code BM-3018-3300	AG 67	/
Tac Venta	(not required)	/

(/) this model can not be assembled


(*) valid for following models: VVF31... DN 25-80/VVF45... DN 50/VVG41... DN 15-50/VXG41... DN 15-50/VVF51... DN 15-40/VVF52... DN 15-40/VXF31... DN 25-80/VXF61... DN 15-50/VVF61... DN 15-50/VXG11... DN 25-40/VVG11... DN 25-40/VFG34... DN 25-40

(**) valid for the followign models: M6: V176A. B, V538C
1/4": V5011A

ELECTRIC CONNECTIONS


Remove the cover screw with a screwdriver and then remove the cover as shown in the picture beside.

The actuator is equipped with a 8 poles removable terminal block; the each pole of the plug is clearly marked and the same label are reported on the PCB (Printed Circuit Board). Before powering up the actuator make sure the plug is properly connected to the PCB and the label on the plugs and on the PCB match.


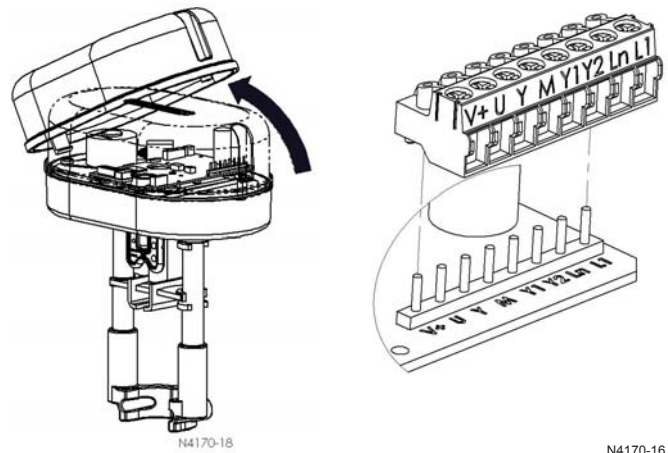


Label	Description	Function	Min Wire Size	Max wire Length
L1	24Vac/Vdc	Power Supply	1.5 mm ²	75 m
Ln	0 V			
Y	0..10Vdc	Modulating Control Input	0.5 mm ²	200 m
M	0 V (Common)			
Y1	Open	Floating Control Input	0.5 mm ²	200 m
Y2	Close			
V+	16 Vdc	Voltage Output max 25mA	0.5 mm ²	200 m
M	Common			
U	2÷10 Vdc	Feedback Output Signal	0.5 mm ²	200 m
M	0V (Common)			

TERMINAL BLOCK

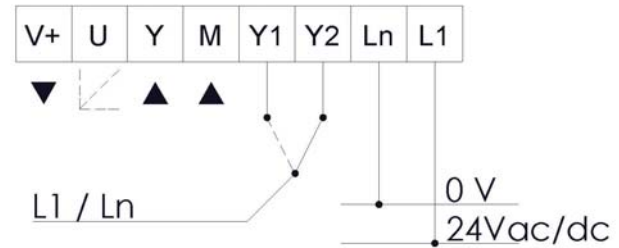

N4170-04

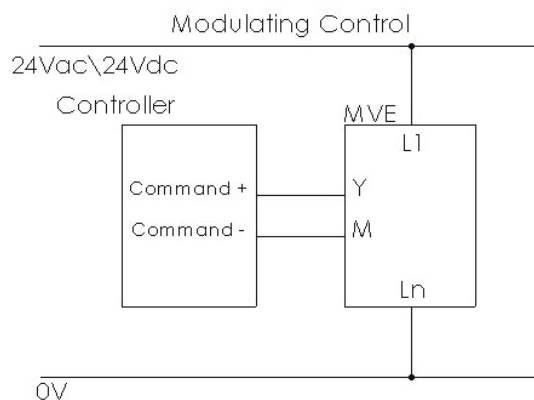
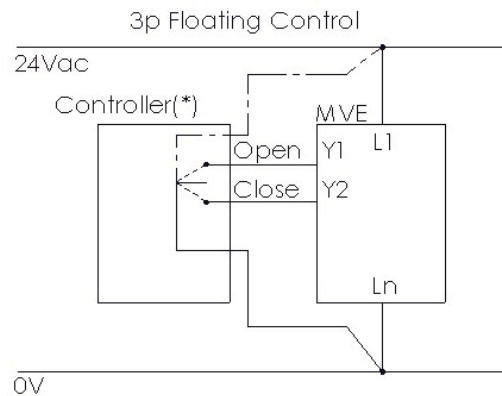


(*) MVE contain a half-wave rectifier power supply. They must not be powered with transformers that are used to power other devices using not isolated full-wave rectifier power supply.




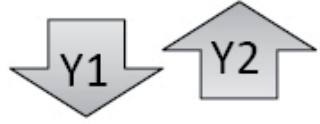
DIPSWITCHES SETTINGS

Before supplying the actuator, set the dip switches according to your needs. Power down and power up again the actuator or act on the manual operation handle to be sure that settings will be recognized.

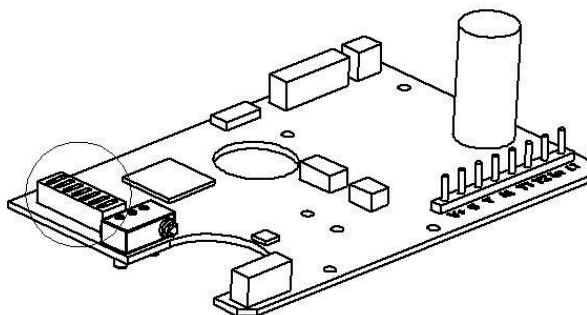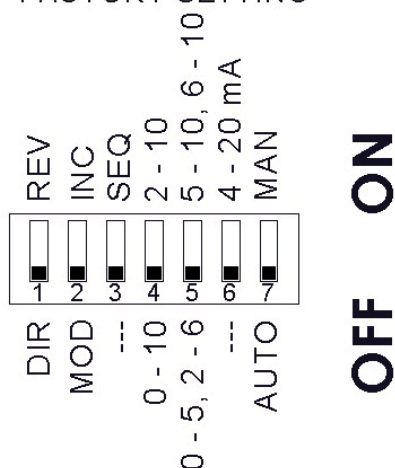
FACTORY SETTING



N4170-06

Dip switch	OFF	ON
1	<p>Direct Action</p>  <p>U = 2V</p> <p>U = 10V</p>	<p>Reverse Action</p>  <p>U = 10V</p> <p>U = 2V</p>
2	<p>Modulating Control (MOD) (Input between Y [+] and M [-])</p> 	<p>3 point floating (INC) (Y1 open-extend , Y2 close-retract connected L1 or LN)</p> 
3	-	Selection of sequence mode, control range defined by SW 5
4	Modulating Control 0-10 Vdc (dip switch 2 OFF only)	Modulating Control 2-10 Vdc (dip switch 2 OFF only)
5	<p>Sequence Control 0-5 Vdc with dip switch 4 OFF only</p> <p>Sequence Control 2-6 Vdc with dip switch 4 ON only (switch 3 ON only)</p>	<p>Sequence Control 5-10 Vdc with dip switch 4 OFF only</p> <p>Sequence Control 6-10 Vdc with dip switch 4 ON only (switch 3 ON only)</p>
6	Voltage Input Signal (input between Y [+] and M [-])	Current Input Signal 4-20mA (input between Y [+] and M [-])
7	Automatic Calibration: the actuator update the stroke range if an unexpected mechanical stop is detected for at least 10 s	Manual Calibration: the actuator calibration is started moving the switch from OFF to ON; if the switch is left in ON the actuator will never update the calibrated stroke value even when an unexpected endpoint is detected

N°	LED	Error	When	Actuator Behaviour		Typical trouble shooting condition	Reset procedure
				Automatic Calibration SW7 OFF	Manual Calibration SW7 ON		
1	RED ON	Calibrated stroke valve less than 5 mm	Calibration / first installation	The actuator pushes/pulls 5 times (unexpected stall) trying to remove the possible obstacle. After 5 tries alarm is signalled (RED Led ON) and the actuator moves to initial position and does not respond to control signal. Stroke value is not updated because out of range	The actuator pushes/pulls 2 times against endpoint during calibration. Alarm is signalled (RED led On) and the actuator moves to the initial position and then it does not respond to the control signal.	Valve with a stroke length lower than 5 mm	Remove power and power up again
2	RED ON	Stroke longer than 60 mm	Calibration / first installation	The actuator exits the 60 mm stroke range and it moves toward the new stroke limit signalling an anomaly (RED led on). The actuator does not calibrate the stroke	The actuator pushes/pulls 2 times against endpoint during calibration. Alarm is signalled (RED led On) and the actuator moves to the initial position and then it does not respond to the control signal.	Valve with a stroke length longer than 60 mm	Remove power and power up again
3	RED Quick Blinking + GREEN ON	Unexpected stall within the calibrated stroke range	normal operation	The actuator tries 5 times against the new stall condition and then after 10 second the actuator updates the new stroke length; RED led is ON	The actuator tries 5 times against the new stall condition and then after 10 second the actuator does not update the new stroke length	Valve stuck	Inverted control signal
4	RED Quick Blinking + GREEN ON	Stroke longer than expected	normal operation	The actuator moves toward the new stall condition with a lower speed; after 10 second the actuator updates the new stroke value	The actuator moves toward the new stall condition with a lower speed; after 10 second the actuator does not update the new stroke value	stem connection loose or valve damaged	Inverted control signal
5	RED slow Blinking	Low Power Voltage	normal operation	The actuator is still working but performance cannot be guaranteed	The actuator is still working but performance cannot be guaranteed	1. Wrong transformer size	Correct Voltage Power
						2. unstable power	
6	RED slow Blinking	High Power Voltage	normal operation	The actuator still working but performance cannot be guaranteed	The actuator still working but performance cannot be guaranteed	1. Wrong transformer size	Correct Voltage Power
						2. unstable power	

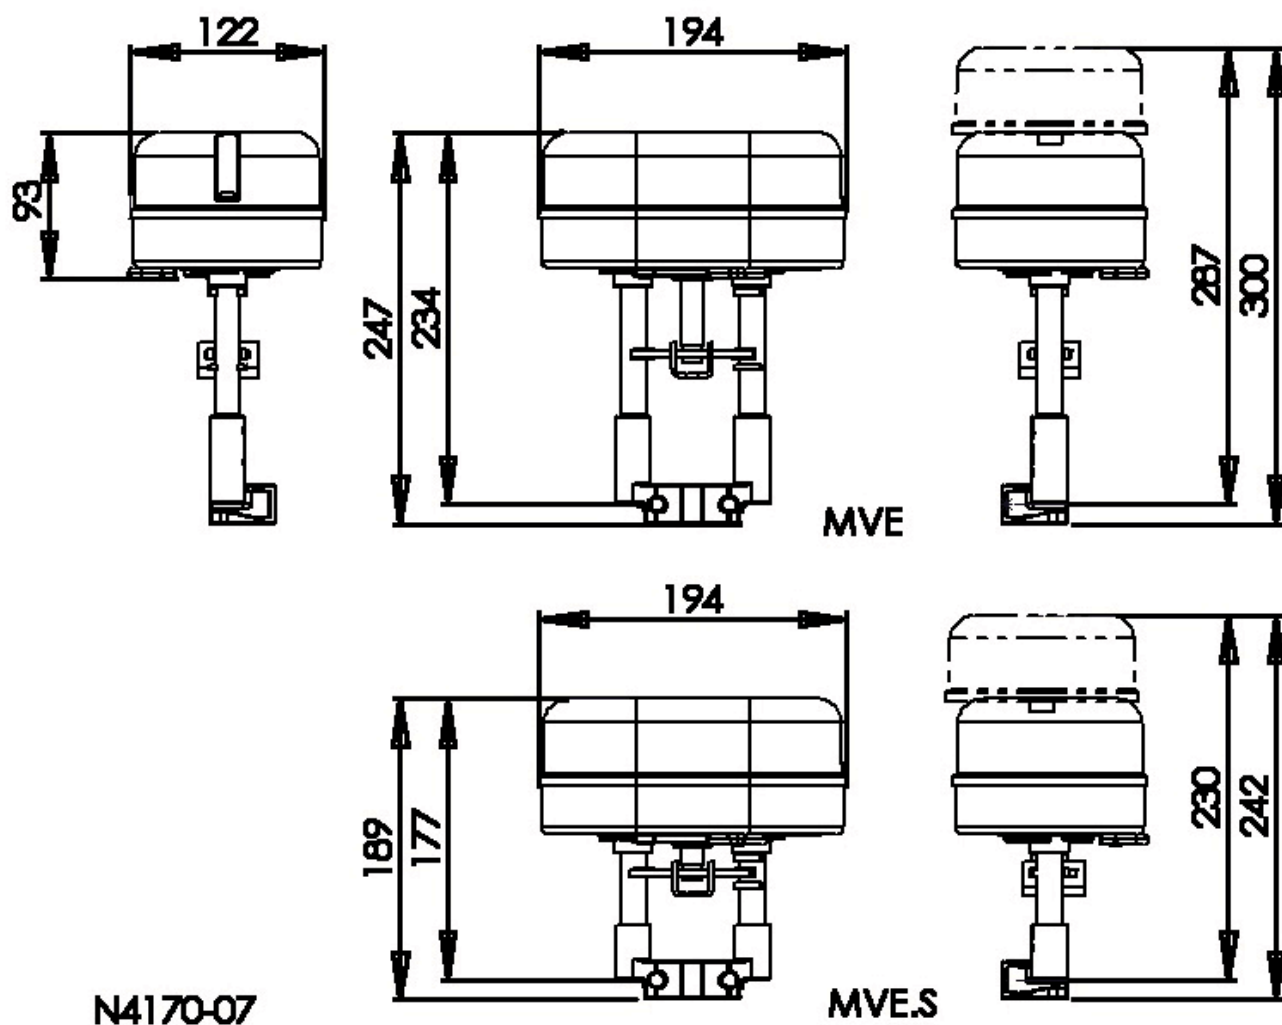

The performances stated in this sheet can be modified without any prior notice due to design improvements